

## Autodialler

HYL004

## Installation & Programming Guide

Please read these instructions before you start the installation

### Features

- LCD Display
- Programmable 9 x 32 digit phone numbers for each trigger.
- 10 second duration recordable message for each trigger.
- Built in memory for telephone numbers and programmed settings.
- Dual triggers.

### Contents:

- 1 x Autodialler
- 1 x Telephone cable
- 1 x Installation & Programming Guide



## Installation

### The Autodialler

**Important:** before installing the Autodialler please take the following into consideration.

1. Position the Autodialler near a phone socket.
2. Before you start to drill holes check for hidden wires and pipe work.
3. Keep the Autodialler out of the reach of small children.


### How to install the Autodialler

1. Remove the small screw from the battery compartment cover and keep safe.
2. Mark and drill 2 holes on a horizontal line 160mm apart.
3. Insert the masonry plugs; screw the 2 fixing screws into the plugs leaving 2mm protruding.
4. Run a cable from the Alarm Control Panel to the Autodialler.
5. Trigger 1 = Alarm switched negative
6. Trigger 2 = Alarm switched negative
7. Connect phone line from the LINE on the Autodialler to an existing phone socket, if this is in use you will have to purchase a double adapter. If you want to plug into an existing telephone you will have to purchase an RJ11 to RJ11 cable, connect one end into PHONE on the back of the Autodialler and the other into the telephone.
8. Install 1 x 9V batteries to the terminals, making sure they are the correct polarity.
9. The Autodialler will beep once.
10. Replace the battery compartment cover.
11. Connect the 12V power supply.
12. Place the Autodialler onto the wall, making sure the tamper switch is pressed in.
13. You can now start to program the Autodialler

# Installation

## Connections on the Autodialler.

**Important:** The tamper terminals are for connection to the tamper inputs on an alarm control panel

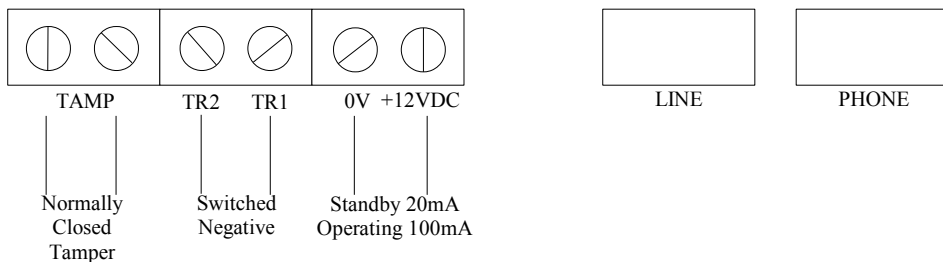

## Autodialler Programming Guide

### How to program the Autodialler

If no key is pressed for 30 seconds, the Autodialler will automatically exit the programming mode.

NOTICE: THE SYSTEM MUST BE IN THE OFF MODE FOR ALL PROGRAMMING

### How to turn the Autodialler OFF

#### Quick Guide

Press <1234> <ESC>

1. Key in the four digit user password code (factory default 1234)
2. Press <ESC>
3. The Autodialler will show "OFF" on the LCD display.

### How to record the voice messages

You can RECORD 2 voice messages of 10 seconds duration, one for each of the 2 triggers.

#### Quick guide

Press <1234> <RECORD> <1> <ENT> Record your message

Press <1234> <RECORD> <2> <ENT> Record your message

1. Key in the four digit user PASSWORD code (factory default is 1234).
2. Press <RECORD>.
3. Press 1 to save as the message for Trigger 1 or press 2 to save as message for Trigger 2
4. Press <ENTER> to start recording. You now have 10 seconds to record your message.
5. Press <ENTER> to stop the recording, or wait for the 10 second count down to finish.

### How to play the voice message

Press <1234> <PLAY> <1> <ENT> to playback the message for trigger 1

Press <1234> <PLAY> <2> <ENT> to playback the message for trigger 2

### How to enter phone numbers

You can enter a maximum of nine telephone numbers for each of the two triggers; each number can be a maximum of 32 digits.

#### Quick Guide:

Press <1234> <PROG> <3> <ENT> (1 - 9) <ENT>

# Autodialler Programming Guide

## How to enter phone numbers (continued)

1. Key in the four digit user PASSWORD code (factory default is 1234).
2. Press <PROGRAM> <3> <ENT> The number you press after the ENTER button will select the position in the sequence you want that phone number to dial. 1 = 1<sup>st</sup> number called, 2 = 2<sup>nd</sup> number called.
3. Press <ENT>
4. Key in the first telephone number followed by <ENT>
5. Press <ESC> to exit the programming mode.
6. Repeat the process until you have entered all the numbers you wish the Autodialler to call once the unit has been triggered, the Autodialler will accept a maximum of 9 different phone numbers.

## How to delete phone numbers

### Quick Guide

Press <1234> <PROG> <3> <ENT> (1 - 9) <ENT> <ESC>

## How to designate telephones numbers to TRIG 1 and TRIG 2

### Quick Guide

Press <1234> <PROG> <6> <ENT> (1 or 2) <ENT> (1 - 9) <ENT>

1. Key in the four digit user PASSWORD code (factory default is 1234).
2. Press <PROGRAM> <6> <ENT>
3. Press 1 or 2 (1 for Trig 1 or 2 for Trig 2) <ENT>
4. Press 1 - 9 (the phone number to be designated) <ENT>
5. Repeat the process until you have designated all the numbers required to each trigger. Any number of the phone numbers can be designated to either or both triggers.

The numbers showing on the LCD display are the phone numbers assigned to that trigger. Pressing buttons 1 to 9 will turn the numbers on / off.

## How to change the user PASSWORD

Default password is 1234

### Quick Guide

Press <1234> <PWORD> (new password)(reconfirm new password)

1. Key in the four digit user password code. (factory default 1234)
2. Press <PWORD>.
3. The LCD will show n-p
4. Key in your new four digit password
5. The LCD will show c-p
6. Key in your new four digit password again
7. The LCD will change to ACC.

## How to program the Autodialler to give a local audible alarm when triggered

Default setting is Alarm OFF

### Quick Guide

Press <1234> <PROG> <1> <ENT> (0 or 1) <ENT>

1. Key in the four digit user password code. (factory default 1234)
  2. Press <PROG> <1> <ENT> (0 or 1) <ENT>.
- 0 = Without Audible Alarm    1 = With Audible Alarm

# Autodialler Programming Guide

## How to program the Audible Alarm sound duration

Default setting is 3 minutes.

### Quick Guide

Press <1234> <PROG> <2> <ENT> (time in minutes) <ENT>

1. Key in the four digit user password code. (factory default 1234)
  2. Press <PROG> <2> <ENT> (time in minutes) <ENT>.
- Maximum time is 99 minutes.  
Recommended time is 20 minutes.

## How to program the Trigger Delay and Arm Delay times

Default setting is both at 0 seconds, instant.

The Trigger Delay time can be set to 0, 30 or 60 seconds. This is the delay time between a trigger being activated and the Autodialler dialing out.

### Quick Guide

Press <1234> <PROG> <4> <ENT> (TIME) <ENT>

1. Key in the four digit user password code. (factory default 1234)
  2. Press <PROG> <4> <ENT> (TIME) <ENT>.
- TIME: 0 = 0 seconds, 3 = 30 seconds, 6 = 60 seconds

The Arm Delay time can be set to 0, 30 or 60 seconds. This is the delay time between a the Autodialler being armed and the triggers being active.

### Quick Guide

Press <1234> <PROG> <5> <ENT> (TIME) <ENT>

1. Key in the four digit user password code. (factory default 1234)
  2. Press <PROG> <5> <ENT> (TIME) <ENT>.
- TIME: 0 = 0 seconds, 3 = 30 seconds, 6 = 60 seconds

## How to turn the Autodialler ON

### Quick Guide

Press <1234> <ENT>

1. At least 1 voice message and 1 phone number must be entered before the Autodialler can be turned on.
2. Key in the four digit user password code (factory default 1234)
3. Press <ENT>
4. The Autodialler will show "ON" on the LCD display.
5. The triggers will become active after the Arm Delay time has expired.

# Autodialler Programming Guide

## How to stop the Autodialler from dialing when triggered

### Quick Guide

When the phone is answered, press # or \* on the telephone keypad.

When the Autodialler starts dialing it will dial the first telephone number and repeat the pre-recorded voice message five times. If there is no response from the phone then it will hang up and dial the next number until all the programmed numbers for that trigger are dialed. It will repeat this dial sequence three times and display “NO ANSWER” if there is no response from any of the phone numbers. To stop the dial sequence press the \* key on the telephone keypad that is receiving the call. The Autodialler will stop its dialing sequence and the Audible Alarm (if programmed) will stop. If the Audible Alarm has been programmed as active then pressing the # key will stop the dialing sequence, but the alarm will continue to sound until timed out. In both cases the Autodialler will remain “ON” waiting for further triggers.

## How to reset the Autodialler

Remove the power and the phone line lead, take the Autodialler from the wall and remove the 9V battery. Inside the battery compartment is a switch, move it to the ERASE position, place the power back onto the system and press <DELETE> twice. The Autodialler will beep twice to confirm the memory has been erased. Remove all power again, place the switch back to NORMAL, replace the 9V battery and place the Autodialler back onto the wall. Replace the telephone line and power the dialer back up. The Autodialler is now set back to the factory default settings and is ready to be turned “ON”.

## Important: It is recommended to change the backup batteries at least once a year.

1. First make sure that the Autodialler is not on, then release it from the wall.
2. Remove the battery door and take out the old battery; re-insert a new alkaline 9V battery.
3. Fit the battery door and hang the Autodialler back on the wall.

## Note and Caution

A leaking battery will result in poor performance and could damage the system. It is recommended that the battery be periodically checked.

Do not mount the Autodialler in areas that are exposed to extreme heat or moisture as this could adversely affect the performance of the system.

Use only a damp cloth and general household cleaning agents to wipe the unit clean. Do not use turpentine, thinners, gasoline or similar substances to clean the unit.

If ADSL Broadband is in use on the premises, it is advised that an ADSL filter be fitted.

**TEL: 01706 363998      FAX: 01706 363991**  
**TECHNICAL: 01706 363990**  
**EMAIL: [info@gjd.co.uk](mailto:info@gjd.co.uk)**

GJD Manufacturing Limited  
Unit 2 Birch Industrial Estate, Whittle Lane  
Heywood, Lancashire  
OL10 2SX  
[www.gjd.co.uk](http://www.gjd.co.uk)